



Bulletin Number: 88-10-4
Reference Number: 831013
Publish Date: 10/87

PONTIAC DIVISION

'88



Dealer
Service
Bulletin



Subject: SERVICE MANUAL REVISION

Models

Affected: 1984-88 FIEROS

The service procedure for removing and replacing rear compartment torque rods on 1984-88 Fieros has been revised from what is shown in section 7 (Body Portion) of the Service Manual.

The following service procedure is the revised version and should be used as reference when torque rod removal is necessary.

Procedure

Remove or disconnect (Figure 1, 2, 3, 4, 5)

1. Deck lid (6)
2. Motor compartment side quarter grille panel (not shown)
3. Screw (2), use tool J-35808 or equivalent
4. Hinge (4)
5. Loosen heat shield, air conditioning hose and bracket, if present.
6. Pin (9) with end of torque rod resting against plywood, grasp U end of rod (8) and pull rearward to release pin.
7. Torque rod from hook (8)
8. Torque rod (3)

Install or Connect

1. Torque rod (3)
2. Torque rod to hook

(CONTINUED)

Pontiac bulletins are intended for use by professional technicians, NOT a "do-it-yourselfer." They are written to inform these technicians of conditions that may occur on some vehicles, or to provide information that could assist in the proper service of a vehicle. Properly trained technicians have the equipment, tools, safety instructions, and know-how to do a job properly and safely. If a condition is described, DO NOT assume that the bulletin applies to your vehicle, or that your vehicle will have that condition. See your Pontiac dealer for information on whether your vehicle may benefit from the information.

3. Pin (9)
 - o With torque rod resting against plywood, grasp U end of rod (8) and pull rearward to insert pin.
 - o Release U end (8) of rod making sure that end of rod hooks are over pin.
4. Air conditioning hose and bracket, heat shield
5. Hinge (4)
6. Screw (2)
7. Motor compartment side quarter grille panel
8. Deck lid (6)

Use applicable labor operation and time as shown in the Labor Time Guide.

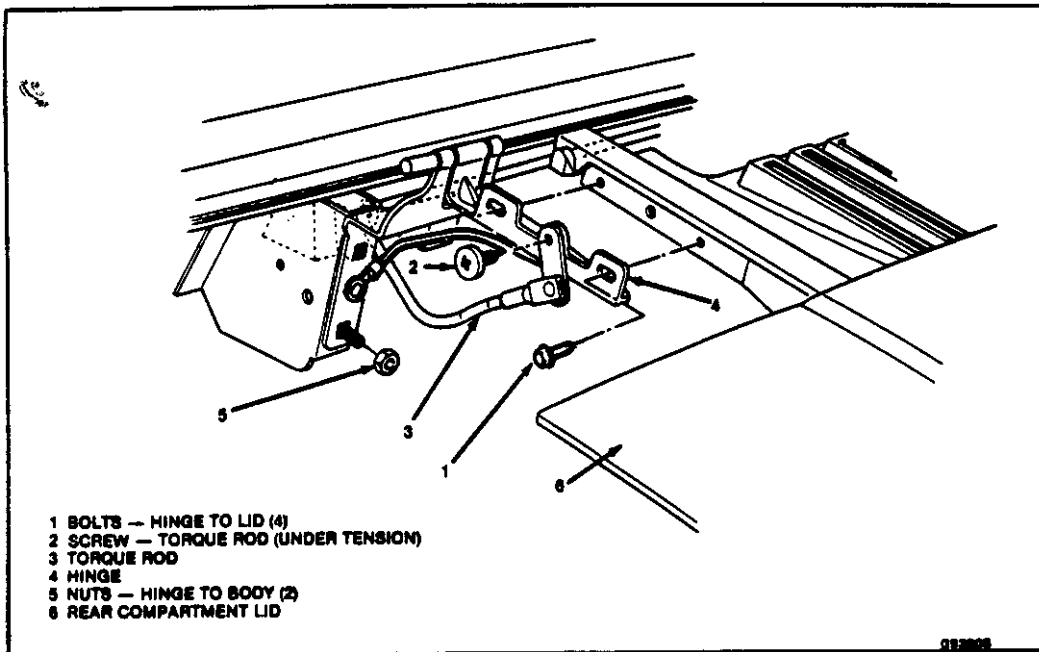


Fig. 1-Rear Compartment Lid Attachment

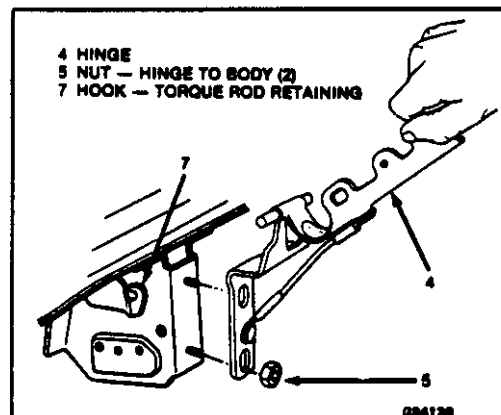


Fig. 2-Rear Compartment Lid Hinge

(CONTINUED)

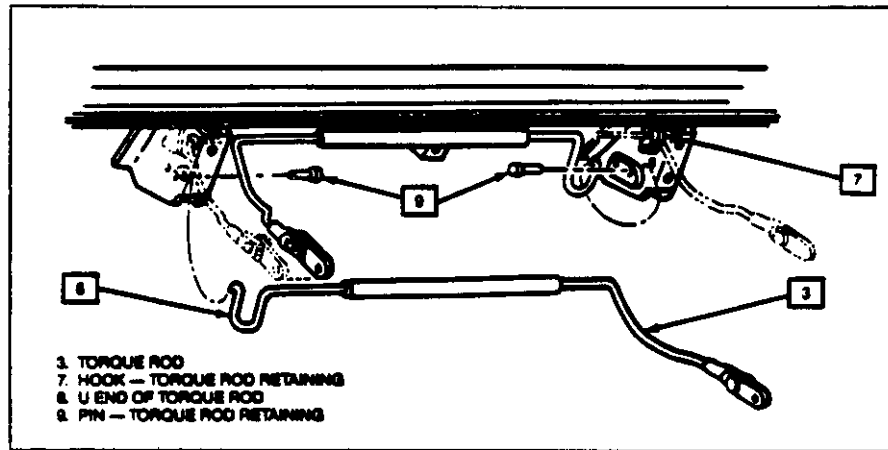


Fig. 3-Rear Compartment Lid Torque Rod

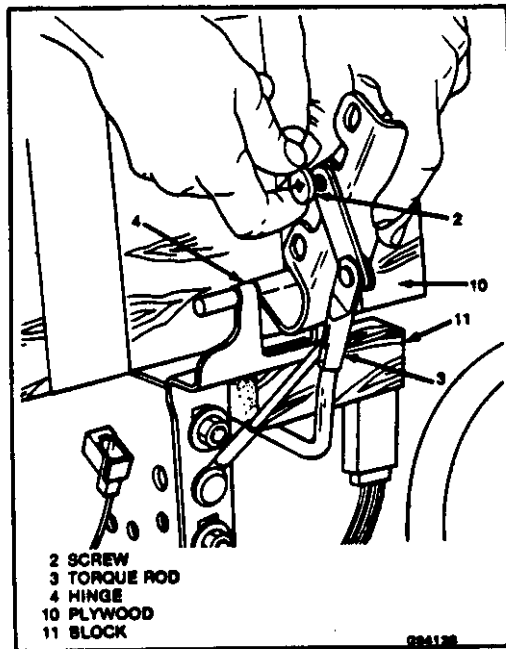


Fig. 4-Attaching Rear Compartment Lid Torque Rod

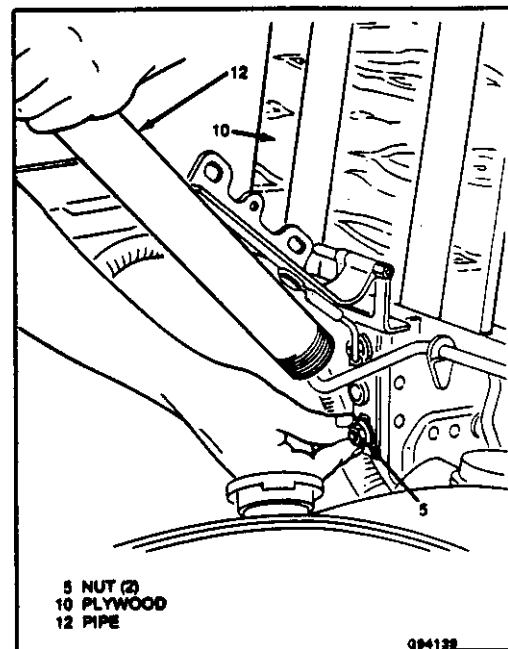


Fig. 5-Installing Rear Compartment Lid Hinge

SERVICE DEPARTMENT
PONTIAC DIVISION
GENERAL MOTORS CORPORATION

